



Connecting Your DSR920 4DTV™

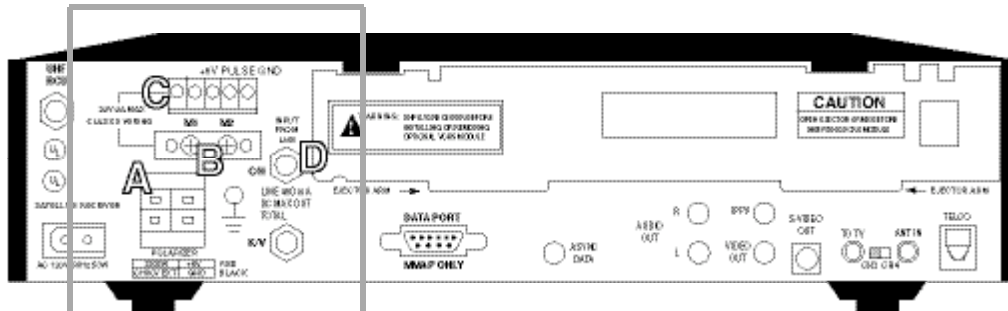

Exploded View

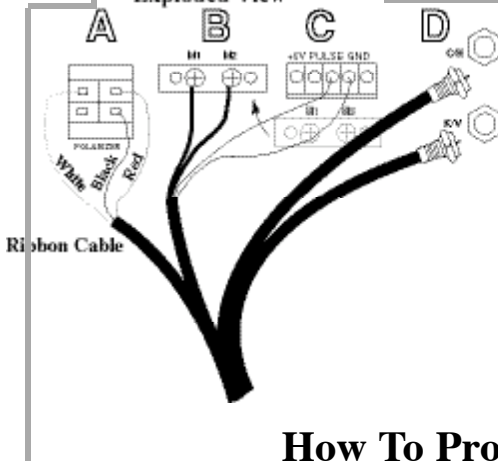

How To Connect Your DSR920 4DTV Receiver

SEE steps 1 - 3 below before connecting your 4DTV receiver.

- A Polarotor Wires. Connect *white* wire to upper left connector (skew), *red* wire to upper right connector (+5v), and the *black* wire to lower right connector (GND).
- B Actuator Wires. Remove connector cover. Connect the 2 *heavy* wires to M1 & M2 (either color to either terminal) for the actuator motor. If your dish moves East when you press the West button, reverse these two wires at the receiver.
- C Connect the 2 *thin* wires to Pulse and GND (either color to either terminal) for the actuator sensor.
- D LNB coax. Connect these coax wires to the C/H for C-band and K/V for Ku-band.

How To Program Your DSR920 4DTV Receiver

- 1) Point your dish at satellite G1. Use your old receiver and antenna positioner, if possible.
- 2) Unplug your old receiver from the AC wall outlet.
- 3) Disconnect wires and coax from old receiver and connect them to your 4DTV receiver using the diagram above.
- 4) Install your decoder module and plug receiver into AC wall outlet.
- 5) Turn on your 4DTV receiver to program G1 into the receiver. Programming is possible by pressing “**OPTIONS, 6,4,3,3**”. This brings up “**Satellite Listings**.” Highlight **G1**. Press “**ENTER**”. This brings up “**Satellite Menu**”. Follow the steps as shown on screen until they indicate you are receiving the best **SIGNAL/QUALITY**. Adjust the skew to obtain the best picture and dish position. Press “**GO BACK**”, then “**ENTER**” to save.
- 6) Staying on G1, tune to Channel 3. There is no video on this channel. Make sure the **DC** light is ON. If not, bump the dish E & W and adjust the skew. This ensures you are receiving a signal and will receive the proper download. Let the unit download for one hour. During the download waiting period, call the Skyvision Programming Hotline at 800-500-9268 and ask them to “**activate my DSR920 4DTV Receiver**.” Even if you are not purchasing subscription programming, you must call a programming provider so they can set the clock on your receiver, enable reception of any “Free Preview” channels, and enable the Interactive Program Guide (IPG).
- 7) When the IPG is programming download is complete, program your East and West limits, then the remaining satellites. Refer to Steps 6, 7 and 8 of your 4DTV Installation Guide.